

SPARE PARTS LIST FOR MODEL DC2080

Nº	SAP code	English Description
1	208130000760	Door AS
2	228130000772	Down Panel
3	218130000232	Front Cover
4	208130000498	Control Panel As
5	208130000494	Door Supporter As
6	208130000097	Side As
7	598130000072	Micro-V Belt
8	208130000446	Base As(Panasonic)
9	208130000587	Drum As
10	218130000226	Upper Frame
11	208130000499	Water Bracket As
12	208130000497	Top Cover As
13	208130000585	Drum Supporter As
14	208130000513	Back Cover AS
15	258130000339	Power Cord
16	228110001264	Knob
17	228110000722	Knob Support
18	228130000767	Control Panel
19	228110001066	Disptay Panee
20	228110001068	Select Button
21	228110001067	Start Button
22	228110001107	Button Support
23	268130000095	LED Screen (yellow)
24	228110001108	Display Support
25	268130000103	Main PCB
26	228130000771	Door adornment circle
27	228130000769	Door Outer Frame
28	228137000020	Door Inner Window
29	228130000536	Door Inner Frame
30	218130000227	Door Hook
31	598110000098	Gasket
32	218130000228	Door Hinge
33	228110001127	Hinge Cap
34	228130000764	Pull Cover
35	228130000532	Water Tank
36	208130000325	Water Pipe AS
37	228130000534	Water Bracket
38	228130000050	Lifter
39	208130000588	Tub Inner AS
(39)	208130000588	Tub Inner AS
40	218130000230	Hinge Support Plate

SPARE PARTS LIST FOR MODEL DC2080

Nº	SAP code	English Description
41	258130000246	Door Lock
42	258130000062	Temperature Sensor
43	598130000033	Temperature Sensor Gasket
44	228130000529	Vent Cover
45	598130000040	Gasket
46	228130000528	Drum Supporter
47	598130000050	Door Supporter Outlet Gasket
48	573000090149	Nut
49	572000090171	Washer
50	218130000115	Front Wheel Axes
51	208130000131	Wheel As
52	573000090160	M8 Hexangular Nut
53	228130000527	Moisture Sensor Bracket
54	218130000216	Moisture Sensor
55	598130000065	Felt
56	208130000652	Lamp AS
57	598130000083	Drum Supporter Gasket
58	208130000495	Fliter Net Bracket
59	598130000012	Lamp Cap Gasket
60	228130000012	Lamp Cap
61	218130000116	Wheel Axes
62	208130000586	Drum Fixture As
63	228130000116	Leg
64	228130000109	Base Bracket
65	258130000058	Capacitor
66	258130000059	Pump
67	518020000295	Float
68	228130000117	Baffle
69	228130000114	Pump Fixture Cover
70	575000090945	Idler Spring
71	228130000554	Circulate Fan
72	572000090170	fan washer
73	598130000026	Motor Cushion
74	228130000100	Motor Cover
75	278039000027	Motor
76	598130000072	Micro-V Belt
77	228130000105	Front Fan Cover
78	228130000555	Condensation Fan
79	228130000113	Back Fan Cover
80	218130000085	Motor Fixture
81	228130000112	Circulate Fan Cover
82	258130000060	Micro Switch

SPARE PARTS LIST FOR MODEL DC2080

Nº	SAP code	English Description
83	208130000115	Condensation
84	228130000111	Condensation Vent
85	228130000110	Circulate Vent
86	228130000508	Micro Switch Cover
87	258130000193	Micro Switch